




## PASSWORD

Click  to enter the Main Menu. Select the Settings icon . Select "DVR Password" to enter selection.

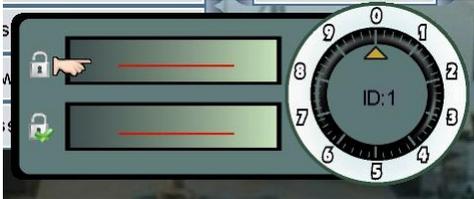

Enter your login ID and password to login.



Select password enabled (O) or disabled (X).

**NOTE: If password function is enabled, the DVR will require a password to access: Main Menu, Playback Mode, and Event List. Those without a password are limited to live view only.**

### For 8 Channel

**GUEST ( ID : 1 )** A Guest can enter playback mode and event list. (Default password: 1111)

**USER ( ID : 2 )** A User can enter main menu, playback mode and event list. (Default password: 2222)

To Logout, click  on the lower menu bar, or right-click on the mouse in live view.

**NOTE: If a password is changed from its default, and later forgotten, the DVR must be sent back to Clinton Electronics for retrieval.**

## PLAYBACK: Time Search

**NOTE: If the password function is enabled, the DVR will require a guest login (ID:1) or greater to enter playback mode.**

Click the Play Button  at the bottom of the screen to enter Playback Mode.



Click on a time segment and scroll the mouse wheel to change the date or time. Click the play button to begin playback.

On the bottom of the screen you will see a segmented search bar. A motion event will show as a green bar  You can left-click on the area to set an orange marker  for later review. These markers can not be deleted once set. Other colored icons are defined as follows:

