clintonelectronics



CE-IPD2 IP Indoor IR Dome Ouick Installation Guide

Clinton Electronics Corp. 6701 Clinton Road. Loves Park, IL 61111

Sales: 1-800-447-3306 Support: 1-800-549-6393 www.clintonelectronics.com

Please follow the installation steps below to set up your CE-IPD2 IP Indoor IP Dome Camera.

Check the package contents against the list below. See P.1

Physical overview. See P.1

LED Indicator Definition. See P.2

I/O Terminal Block Circuit. See P.2

Install the camera and connect all cables. See P.3

Microsoft OS: Use the software CD to install Intelligent IP Installer. See P.5

Access the IP Camera using Intelligent IP Installer. See P.5

Mac OS using Safari Browser. See P.8


For more information, please check the User Manual available in the Software CD or you can download the latest software from http://clintonelectronics.com

Note:

CAT5 cables are supplied by user. RJ45 Ethernet network connection (using CAT5 standard UTP or better quality cable) for Power over Ethernet (PoE 802.3af)

PACKAGE CONTENTS								
Camera	CE-IPD2 IP Indoor IR Dome Camera							
Quick Installation Guide	Brief product information and quick installation							
Software CD	 IP Surveillance Software Intelligent IP Installer User Manual Language Packs 							
Accessory	 Screw pack for wall & ceiling mounting (3 screws, 3 plastic wall anchors) Mounting Template 4pin I/O terminal block 							

PHYSICAL OVERVIEW

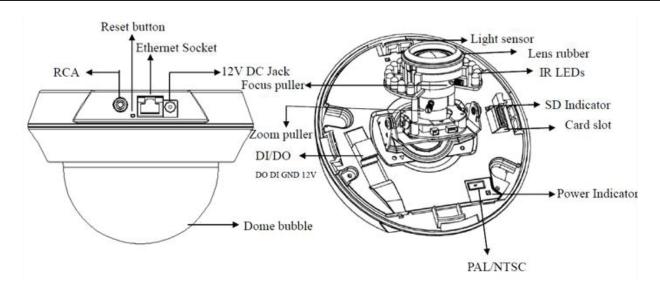

LED INDICATOR DEFINITION

LED	Color	Indication						
Network	Green	Steady green for network link						
Network	Orange	Flashes orange when there is activity						
	Red	Steady red for booting up process; Steady red 30 Seconds when WPS configure failed.						
Power	Blue Steady blue for booting up completion							
	Purple	Flashes purple during firmware upgrading; when reset button pressed for at least 5 sec. to factory default						
	Off	When you press reset button; or Power off						
SD Card	0,,,,,,,,	Steady orange means SD Card is ready						
	Orange	Flashes orange while accessing SD Card						


RESET: When the camera is powered, press the 'RESET' button to reboot the camera, or hold the 'RESET' button for 10 seconds to restore the factory default camera settings.

RESET PROCESS: Press the 'RESET' button until indicator light goes OFF -> steady RED (booting up process) -> steady BLUE (booting up complete).

RESET TO DEFAULT PROCESS: Press until indicator steady BLUE -> steady RED (booting up process) -> steady BLUE (booting up complete).

DI/DO DIAGRAM


DI/DO Diagram

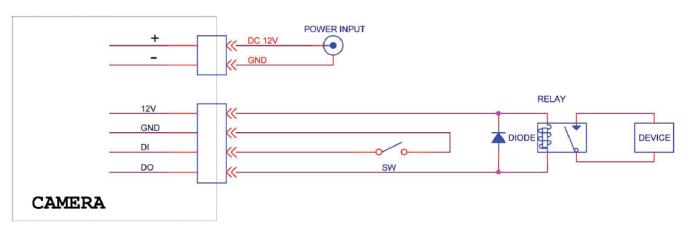

INSTALL THE CAMERA AND CONNECT ALL CABLES


a. Wall Mounting And Ceiling Mounting

- 1) Attach the drill template to the wall/ceiling. Drill holes into the wall, drill an extra hole in the center if you want to route cables through the mounting surface.
- 2) Then hammer the supplied plastic anchors into the screw holes (if mounting to drywall).
- 3) Align the holes on the base of camera with the plastic anchors on the wall or ceiling, and insert the supplied screws to the corresponding hole and tighten the screws.

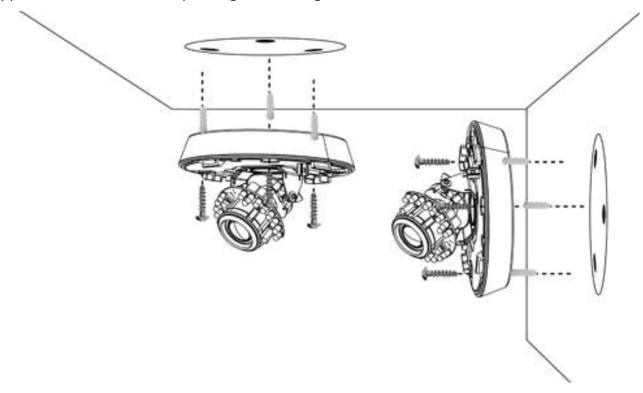


b. Connect Cables And Power Supply

- b1) Without PoE (Power Over Ethernet) connection.
 - 1. Connect the power adaptor to the IP Camera.
 - 2. Using a standard RJ-45 network cable, connect the IP Camera to a normal Hub / Switch / Router.

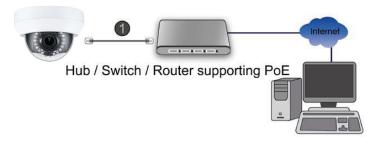


- b2) With PoE (Power Over Ethernet) connection.
 - 1. Using a standard RJ-45 network cable, connect the IP Camera to a PoE-enabled Hub / Switch / Router.

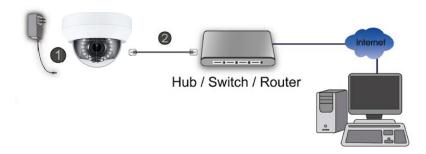


c. 3 Axis Adjustment

- 1) Turn the lens module to the right or left to adjust the pan of the camera.
- 2) Turn the lens module up or down to adjust the tilt of the camera.
- 3) Rotate the lens module to adjust the image orientation.

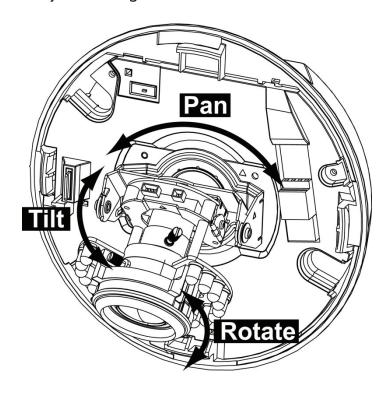

d. Zoom/Focus Adjustment


- 1) Loosen the Zoom and Focus pullers to adjust the zoom and focus.
- 2) Lock the desired adjustments by tightening the Zoom and Focus pullers.

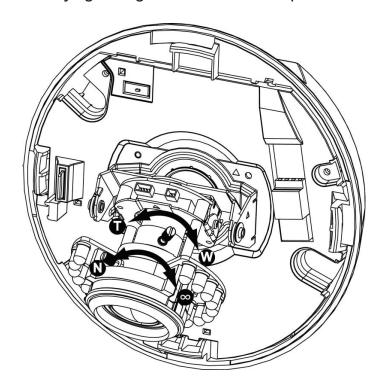

f. Completion

- 1) Clean any finger prints or dust from the inside of the dome bubble.
- 2) Align the cutout in the dome mask to the camera lens.
- 3) Fasten the dome cover to the base by rotating clockwise to secure. Try to align the small raised dots where the dome cover and camera base meet.
- 4) Clean any finger prints or dust from the outside of the dome bubble.

Note: Because of the rubber gasket on the lens, the dome cover will fit tightly onto the camera base.

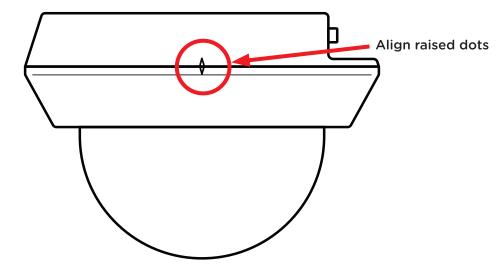

Microsoft OS: Use the software CD to install Intelligent IP Installer

Power on your PC and insert the CD-ROM. The setup page will show up automatically. Please follow these steps to install the firmware. Select "Intelligent IP Installer" and follow the installation process to complete the installation.




Access the IP Camera using Intelligent IP Installer


- 1. Please check two settings before using Intelligent IP Installer.
 - a. Browser's Internet Properties/Security/Default Level



b. Browser's Internet Properties/Privacy/Uncheck Pop-up Blocker

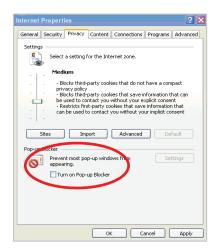

2. Click the Intelligent IP Installer Icon on your desktop. The main page will show up listing all active camera and video server devices. Select the relevant IP camera from the list and click Link to IE.

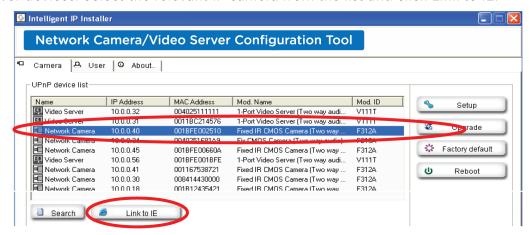

3. Enter your Username and Password to login to the IP Camera. (Default is admin / admin). Then go to Settings/Compatibility View. Type in the camera's IP address and click ADD. Once the cameras IP address has been added to the Compatibility View list, click CLOSE.



4. When accessing the IP Camera for the first time, a yellow information bar appears below the address bar: This website wants to install the following add-on: 'AxvideoView.cab from 'Clinton Electronics'.



5. Click the information bar, and select Install ActiveX control.



6. Click Install.



7. Live video displays in the center of your web browser.



Note:


Internet Explorer is currently the only browser that supports recorded video in Playback. Google Chrome, Firefox, and Safari only support live video.

Mac OS using Safari Browser

1. Select Safari icon



2. Click Bonjour function and select the camera you wish to access.

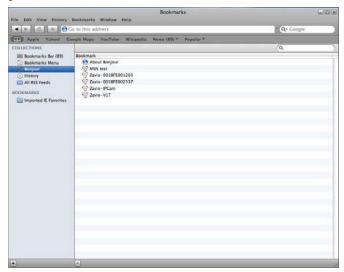

3. Enter name and password to login to the IP camera. (Default is admin / admin)



4. The monitor image will be displayed in your browser.



Minimum System Requirements

For normal operation and viewing of the network camera, it's recommended that your system meet these minimum requirements for proper operation:

Item	Minimum Requirements
CPU	Pentium 4 2.8GHz (or equivalent AMD)
Graphics Card	256MB RAM graphic cards (or equivalent on-board graphic cards)
RAM	Minimum 1 GB of RAM, (2GB or above is recommended)
Operating System	Windows 2000, 2003, XP, Vista or Windows 7 Mac OS Leopard 10.5
Web Browser	Internet Explorer 8 or later

Note:

- 1. If using Windows 98 or Windows ME, please install IP Installer before using WEB UI to ensure the system runs normally.
- 2. If not able to view the recorded video file, please install Xvid codec while installing Intelligent IP Installer. (For Windows 98, ME or 2000 server, the codec might not work properly. Please download Xvid codec 1.0 from the internet.)
- 3. Please keep updating the latest Windows software and service package. (Ex: Net Framework, Windows Media Player, Enhance ActiveX Security)

CONTACT









Web www.clintonelectronics.com

MEMO

 	 	 	• • • •	• • • •	 	 	 	• • • •	 • • • •	 		
 	 	 	• • • •		 	 	 	• • • • •	 	 		
 	 	 • • • •	• • • •	• • • •	 	 	 • • • •	• • • • •	 • • • •	 	• • • •	
 	 	 			 	 	 		 • • • •	 		
 	 	 		• • • • •	 	 	 	• • • • •	 	 		
 	 	 			 	 	 	• • • • •	 	 		
 	 	 		• • • • •	 	 	 	• • • •	 • • • • •	 		
 	 	 		• • • • •	 	 	 	• • • •	 • • • •	 		
 	 • • • •	 			 	 	 		 	 		
 	 	 			 	 	 		 • • • •	 		
 	 	 			 	 	 	• • • •	 	 		

clintonelectronics

Make sure you read this manual before using the camera. Store this manual safely so that you can use it in the future. Please use this manual along with the Installation Manual included with the camera.

Clinton Electronics Corp. 6701 Clinton Road. Loves Park, IL 61111