
CE-EX-VDA4 User Guide

4ch EX-SDI/HD-SDI Splitter

Use with an assortment of EX-SDI 2.0, EX-SDI & HD-SDI cameras to split the original input signal into 2 signals. The output signal type is automatically converted into HD-SDI regardless of the original input signal.


A INDOOR USE ONLY


- 1. Connect the digital output (EX-SDI 2.0, EX-SDI or HD-SDI) from camera into the desired connection on the CE-EX-VDA4 marked **INPUT**. Repeat this step to fill available inputs.
- 2. Connect the OUTPUT from the CE-EX-VDA4 to an HD-SDI device such as DVR, Multiplexer, Monitor, etc. The output signal of this device is HD-SDI (EX-SDI 2.0 & EX-SDI signals are converted, frame rate and resolution do not change). Repeat as this step to fill available outputs.
- 3. Connect DC12V power to the device using the supplied power supply.
- **4.** With correct power and video connections the LED indicators will illuminate. If a Video Input does not illuminate check input connection(s) and check if the correct output is used on the camera.

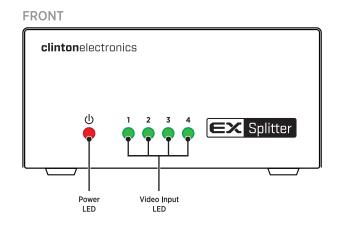

DC12V

Power

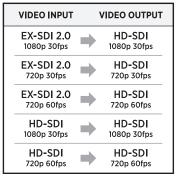

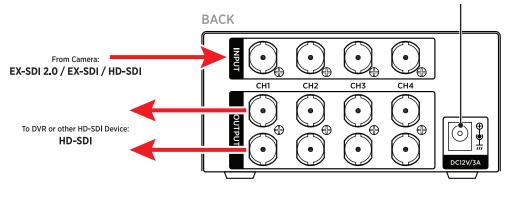

^{*}accepts both EX-SDI & EX-SDI 2.0

CONNECTION DIAGRAM

Below is an example of possible installation using this device. The camera inputs can be a mix of EX-SDI 2.0, EX-SDI & HD-SDI signals or can be all of one type of signal. The maximum output HD-SDI signal distance of this device is 275 ft.

