


CE-EX04UTP User Guide

4ch Passive EX-SDI 2.0 to CAT5e/UTP Converter

The CE-EX04UTP kit enables 4 EX-SDI 2.0/1.0 signals to be transmitted up to 400' over CAT5e cable without the use of a power supply.

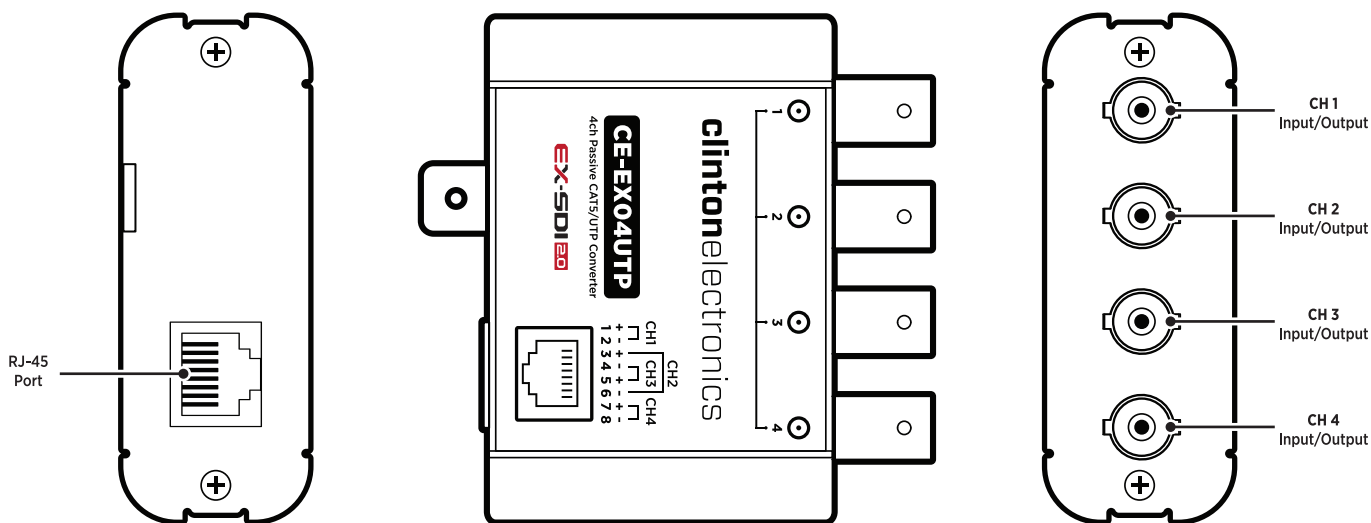


Connections are Non-directional: can be used as an Input or an Output

INSTALLATION:

1. Connect the output from the EX-SDI 2.0 cameras to the desired channels on the first CE-EX04UTP. (limit coax cable distance to 75 feet)
2. Connect ethernet cable to the RJ-45 port on the first device. (limit ethernet/UTP cable distance to 450 feet)
3. Connect the opposite end of the ethernet cable to the RJ-45 port on the second CE-EX04UTP.
4. Connect the output from the second device to an EX-SDI 2.0 DVR. (limit coax cable distance to 75 feet)

CONNECTION DIAGRAM:

Distances will vary depending on ethernet & coax cable type & integrity. Cable splices, couplers and severe kinks will reduce the overall possible distance.

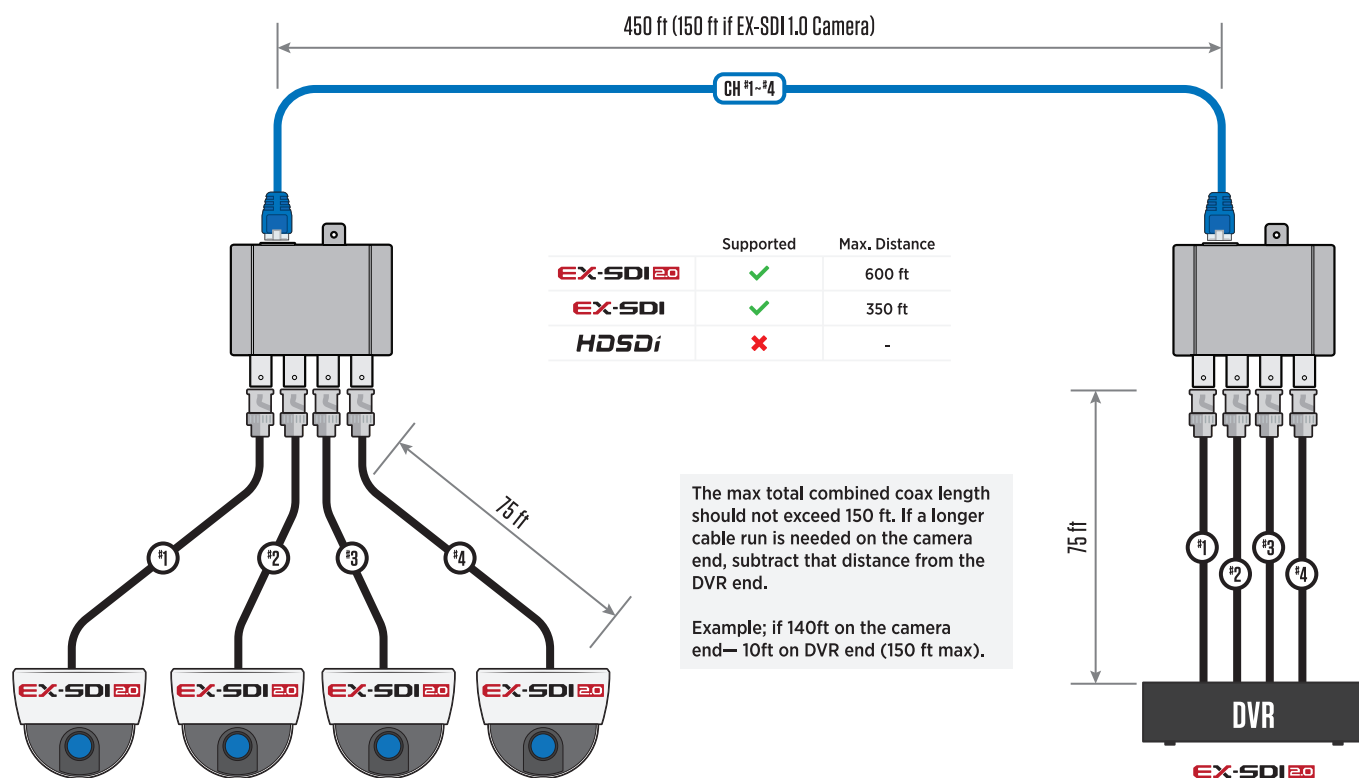

*Distances shown based on new CAT5e ethernet cable & new RG59/U (20AWG) coaxial cable.