


CE-SDI2TVI User Guide

HD-SDI / EX-SDI to HD-TVI Converter

This device converts an HD-SDI, EX-SDI, or EX-SDI 2.0 (2MP) signal into an HD-TVI signal that can be displayed on a TVI DVR.

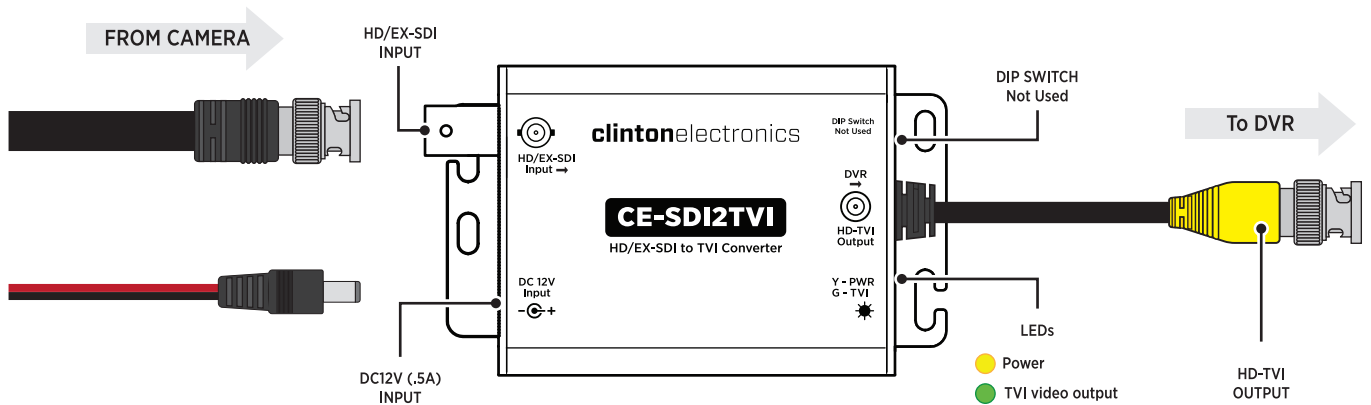

INSTALLATION:

1. Connect the output from the camera to the connection marked **HD/EX-SDI INPUT**.
2. Connect the yellow BNC cable connection from this device marked **HD-TVI OUTPUT** to TVI DVR or other TVI equipment.
3. Connect DC 12 Volt Power (Power Supply sold separately) to the connection marked **DC12V INPUT**.
 - If proper power and video connections have been made the LED indicators will illuminate (yellow & green).

TROUBLESHOOTING:

No TVI Output:

- Check that the device is connected properly (HD/EX-SDI camera connected to input, TVI output connected to TVI DVR).
- Check if the connected DVR or other equipment supports TVI.
- Check the SDI output from the camera, (HD-SDI / EX-SDI / EX-SDI 2.0) and check the cable distance from camera.
- Check if the correct connector from the camera is used— Black & Gold connector is HD/EX-SDI, Yellow or Green connector is Analog.

LED is flickering:

- Turn OFF the DIP Switches.


Camera control (UCC/UTC) not working:

- This device does not support upstream coax communication.

No power:

- Check power supply type; AC24V & DC24V will damage this device. Use only DC12V power!

CONNECTION DIAGRAM:

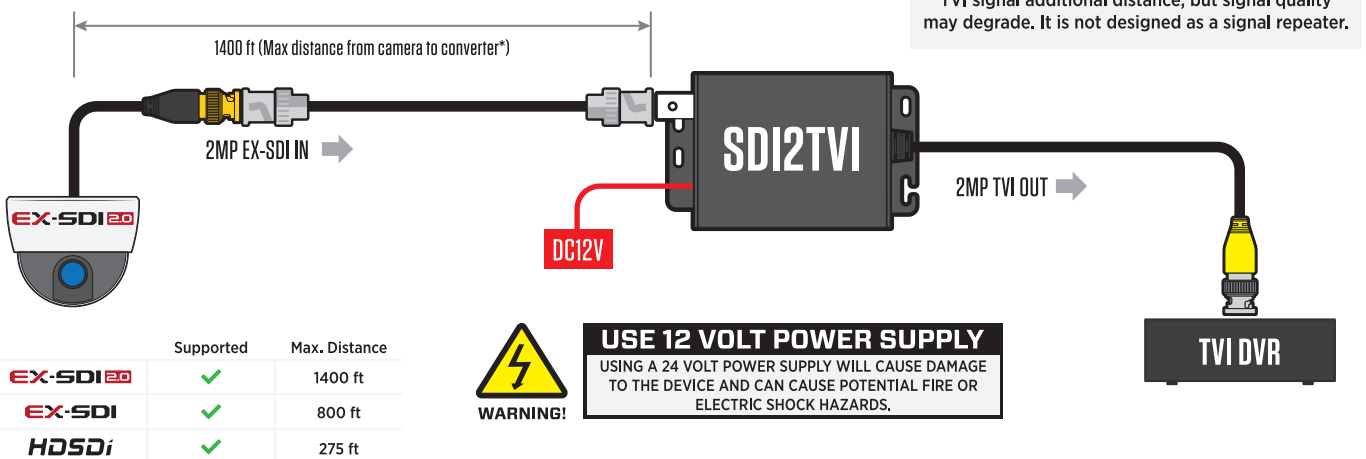

This converter should be directly connect to a TVI DVR or other TVI equipment. It is possible to run the TVI signal additional distance, but signal quality may degrade. It is not designed as a signal repeater.

*Distances will vary depending on coax cable type & integrity. Cable splices, couplers and severe kinks will reduce the overall possible distance.